 


**OSCILLATING CERAMIC HEATER
TECHNO CERAMICO**

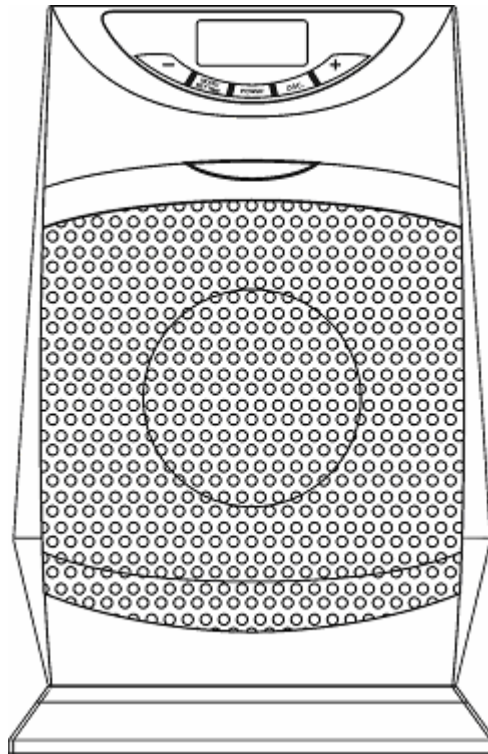

READ AND SAVE THIS INSTRUCTION

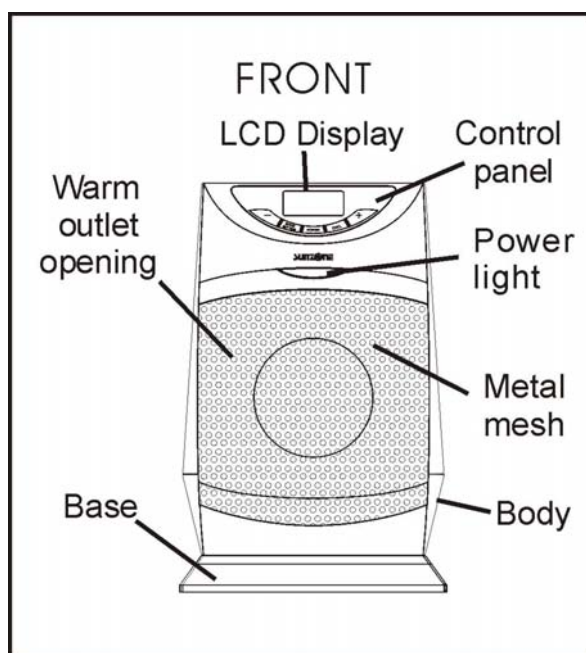 


Figure 1

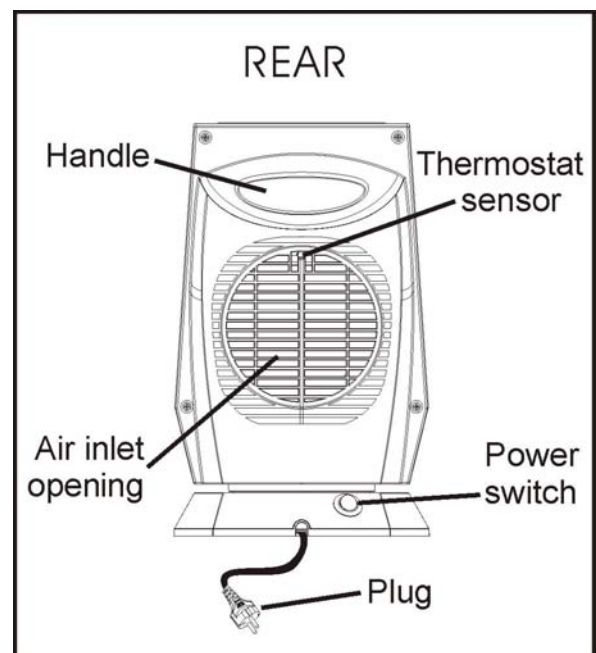 


Figure 2

GENERAL SAFETY INFORMATION

1. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
2. Make certain that the power source conforms to the electrical requirements of heater. (AC220-240V/50Hz)
3. The appliance is not intended for use by young children or infirm persons without adequately supervision; Young children should be supervised to ensure that they do not play with the appliance.
4. To reduce the risk of electric shock, this plug is intended to fit in a correct outlet. If the plug of heater does not fit fully in the outlet, contact a qualified electrician.
5. Where possible, avoid using of extension cords because the extension cord may overheat and cause a risk of fire. Never use a single extension cord to operate more than one heater.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire or damage the heater. Do not block or tamper with the heater in and manner while it is in operation.
8. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not place heater on soft surfaces, like a bed, where openings may become blocked.
9. Always place the heater on a stable, flat, level surface when operating, to avoid the chance of the heater overturning. Locate the power cord so the heater or other objects are not resting on it, Do not run power cord under carpeting. Do not cover power cord with throw rugs, runners, or the like. Arrange power cord away from room traffic and where it will not be tripped over.
10. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 0.9m from the front of the heater and keep them at least 0.3m from the sides and rear.
11. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
12. The heater is intended for household indoor use only.



13. Do not cover! WARNING: In order to avoid overheating, do not cover the heater.
14. The heater must not be located immediately below a socket- outlet.
15. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

OPERATION

Control Panel:

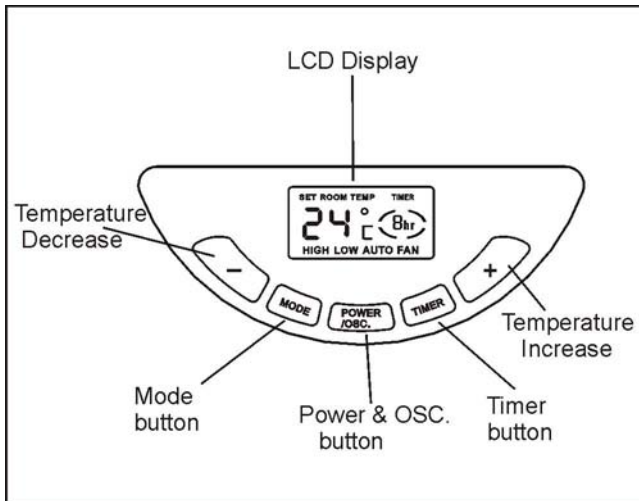 


Figure 3

1. Carefully remove the heater from the bag and the gift box.
2. The heater must be placed on a flat, level surface.
3. When heater is plugged in and turn on the power switch on the rear of the unit, there will be a “beep” and a red power light to indicate that there is power to the unit. The red light will remain lit until the power switch is closed or the heater is unplugged from the outlet.
4. Press the **POWER/OSC.** button will start the heater.
5. Upon turning the heater on, the unit will be in the **LOW** heat mode(1100 watts), the LCD will display the current air temperature, and the FAN start to run. At the same time the “**LOW**” in the LCD will be highlighted.
6. When **MODE** button is pressed at this point, the heater will be set into **HIGH** heat mode(1800 watts), and the “**HIGH**” in the LCD will be highlighted..
7. Pressing the **MODE** button once more will set the heater into AUTO mode(1800 watts). Notice that the display now displays a SET TEMP indicator. (see **THERMOSTAT INSTRUCTION**)
8. Press the **MODE** button again and the heater will be in the **FAN** mode(15 watts). The “**FAN**” in the LCD will be highlighted. **FAN** mode is for fan-only operation, without any heat output.
9. Pressing the **MODE** button again and the heater will go back to **LOW** heat mode. Continuing to press the **MODE** button will cycle the unit through LOW, HIGH, AUTO,FAN mode.
10. Press **POWER/OSC.** button, the heater will oscillate back and forth. Press it again and the oscillation will stop.
11. To disconnect heater, press **POWER/OSC.** button for above 3 seconds, and turn off the power switch, then remove plug from outlet.

Timer Function. Press the **Timer** button once and the light comes on indicating 1 hour of time. Press it again and the light indicates 2 hours. Press it a third time and it indicates 3 hours. The total time that can be indicated at one time is 8 hours. Continuing to press the **Timer** button will cycle through the settings until all timer lights are off. When the time indicator lights are off, the heater will run continuously.

Once the timer has been set, the timer will count down the hours in 1 hour increments, and the

LCD will display the remaining operating time, until the heater will turn itself off.

THERMOSTAT INSTRUCTION

1. Pressing the **Mode** button until the display shows AUTO mode.
2. The default temperature display is by fahrenheit degree, you can change it into Celsius degree display by pressing the ⊕ and the ⊖ button together.
3. To adjust set temperature, press the **Temperature Increase** button to increase the desired temperature and the **Temperature Decrease** button to decrease the desired temperature.
4. When the air temperature raises 2 degrees above the set temperature, the heater will stop heating at once and stop blowing after 20 seconds.
5. When the air temperature drops below the set temperature, the unit will come back on.

SAFETY FEATURES

1. This heater is equipped a thermal overload protector to prevent overheating.
2. When an overheat temperature is reached, the heater will be automatically shut off. It can only resume operation when the user resets the unit. (See **RESET INSTRUCTION**)

RESET INSTRUCTION

1. Unplug the heater and wait 5-10 minutes for the unit to cool down.
2. After the 5-10 minutes, plug the unit in again and operate normally.

MAINTENANCE

**WARNING: ALWAYS UNPLUG THE CORD BEFORE CLEANING, MOVING OR SERVICING.
DO NOT IMMERSE HEATER IN WATER!**

Clean the heater grills with the vacuum brush attachment on your vacuum cleaner. This will remove dirt from the inside of the heater. DO NOT ATTEMPT TO TAKE HEATER APART. Clean the body of heater with a soft cloth moistened with a solution of mild detergent and water. Then dry it with another cloth.

CAUTION: Do not use gasoline, thinner, harsh cleaners, etc., as they will damage the heater. NEVER USE ALCOHOL OR SOLVENTS. (NEVER USE ALCOHOL OR SOLVENTS.)

STORAGE: Store the heater with these instructions in the original carton in a cool, dry place.

CONFORMITY WITH DIRECTIVES

This product is CE marked to denote conformity with Directives 73/23/EEC (Low Voltage) and 89/336/EEC (Electromagnetic Compatibility), as amended.

This symbol on the product or its packaging indicates that the appliance cannot be treated as normal domestic trash, but must be handed in at a collection point for recycling electric and electronic appliances.



Your contribution to the correct disposal of this product protects the environment and is endangered by incorrect disposal.

Further information about the recycling of this product can be obtained from your local town hall, your refuse collection service, or in the store at which you bought the product.

This regulation is valid only in EU member states.

